
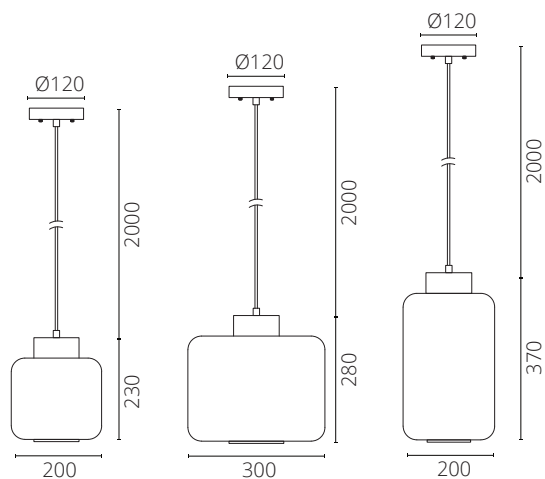


# JARA 20-30-40

Installation manual

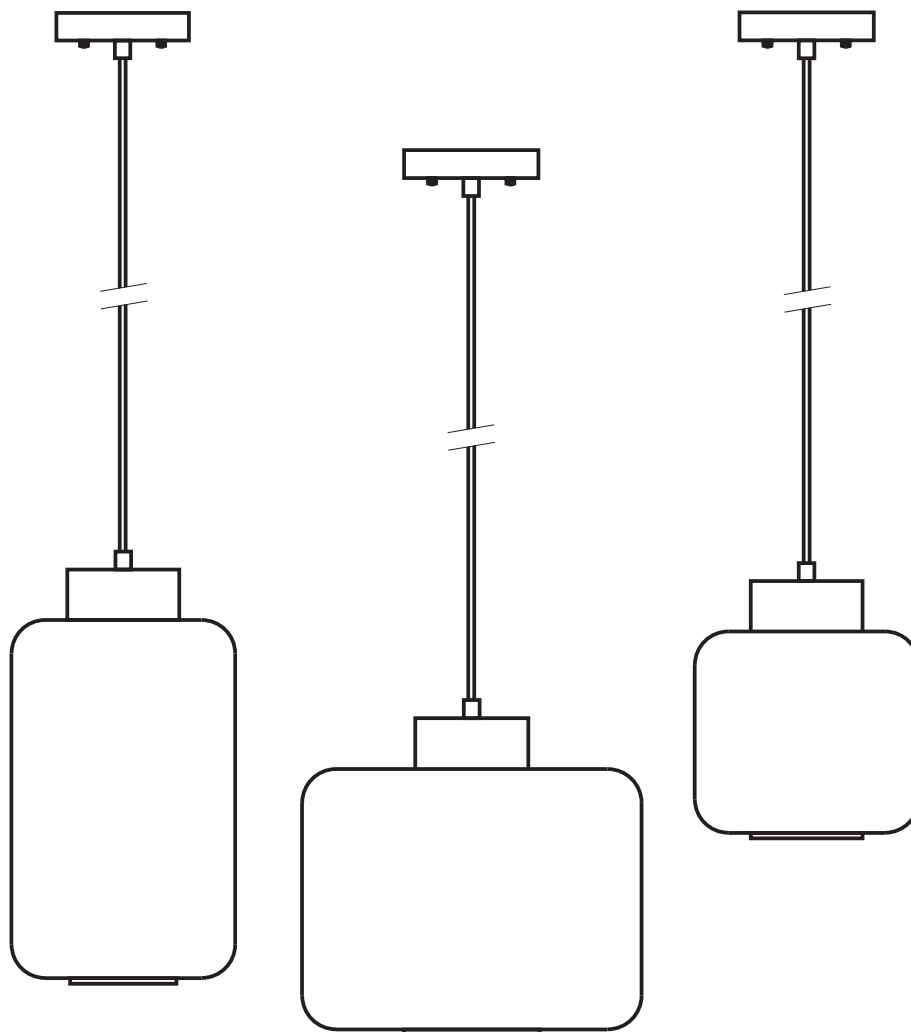

JARA 20

JARA 30


JARA 40

# JARA 20-30-40


Installation manual




01

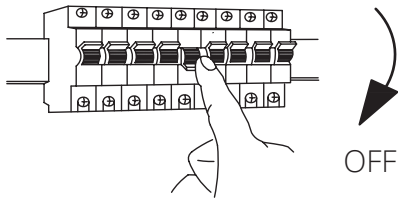


02

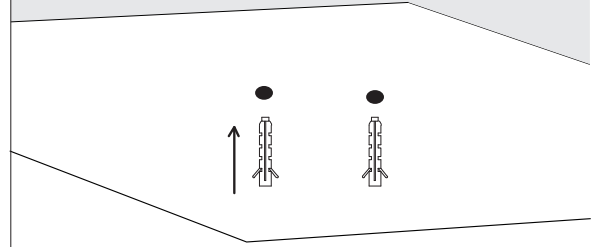


03

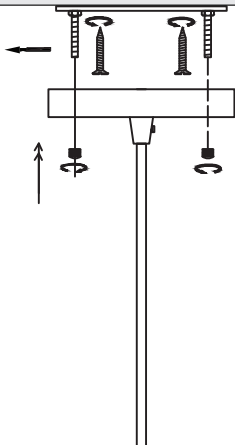

04

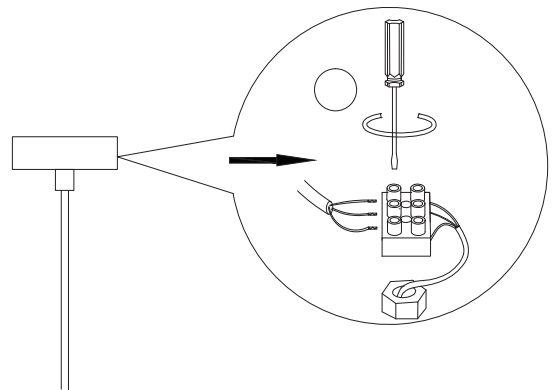

05

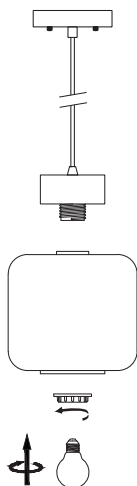

06

